## **Isolator Module ISM1-2**

- Safe disconnection of a faulty loop section
- For use in a System Sensor/200 loop
- Installation in commercial installation boxes or in the LST standard grid
- Small design



## Description

The Isolator Module ISM1-2 is used on the ADM loop with System Sensor/200 protocol and disconnects the loop in the event of a short circuit of the loop connection. Thereby only the loop elements located between ty, from both ends of the loop, until the fault is removed. two isolator modules are affected by the short circuit.

The Fire Detection Control Panels Series BC600 and BC216 report the affected loop elements as faulty and operate the remaining loop sections, which are not faul-

## **Specifications**

Operating voltage	Supply through loop voltage	
Current consumption	max. 0.2mA	
Ambient temperature	-5°C to +50°C	
Dimensions L $\times$ W $\times$ H	70 × 24 × 15 (mm)	
Weight	20g	
Approvals	VdS G296011 0786-CPD-21029	
Order number	249003	
Order name	Isolator Module/500/200 ISM1-2	





Building Safety. Building Security.