

GENERAL DESCRIPTION

This product permits to set and read various parameters stored in the devices of the analogue-intelligent and the enhanced conventional series family. Connection to the devices is made through the adaptor base of the programming unit for the detectors or through one of the two plug-in cables (supplied with the product) for all other devices (only for the analogue-intelligent series).

The user can interact with the programming unit by using its in-built keypad and display; through this interface the user navigates through a menu-based set of options and commands, permitting him to program certain parameters on the devices or to read data from them.

The programming unit can be used, for example, to:

- read and set an analogue address on a device,
- change a conventional or analogue temperature sensor from Rate Of Rise to High Temperature or vice versa,
- read the firmware version of a device and other data,
- activate or deactivate input or output channels on a multi-module device,
- programming a conventional zone module,
- program the operating mode on a 32 tones analogue base sounder or its audio-visual variant.



Picture 1 - overview of the programming unit



Picture 2 - the adaptor base for sensors on the programming unit

POWER SUPPLY

The programming unit needs to be power supplied: for this purpose a 9 V battery (supplied with the product) is needed; to install the battery into the programming unit follow these steps:

- 1) Slide-off the battery lodgment cover from the programming unit.
- 2) Connect the device's snap connector to the power supply battery.
- 3) Insert the battery into its lodgment.
- 4) Slide-in the battery lodgment cover onto the programming unit.



Picture 3 - the programming unit, the power supply battery and its cover

CONNECTING DEVICES TO THE PROGRAMMING UNIT

Only one device can be connected to the programming unit at a time; depending on the device type, one of the three following ways of connection must be selected:

- Detector devices must be installed on the programming unit's adaptor base.

- Analogue 32 tones base sounders (and their audio-visual variants) must be connected to the programming unit with the supplied jack to jack cable (see picture 5A): insert one jack plug into the programmer's socket and the other jack into the sounder's lateral socket (see picture 6).


- All other devices (only analogue-intelligent) must be connected to the programming unit with the jack to female plug-in terminal block cable (picture 5B): insert the cable's jack pin into the programmer's socket and the cable's female plug-in terminal block into the device's analogue loop male socket (see picture 7 as an example and check the product's specific installation manual).

Important note: avoid having a detector installed onto to the programming unit and another device connected through the cable: if so is done, the programming unit will give you false information.

You can notice that the "jack to terminal block" cable is composed of two wires: one is positive (red color) and the other one is negative (black color). When inserting the plug-in female terminal block, check the corresponding polarity on the device's analogue loop male socket: positive polarity coincides with positive polarity and negative polarity coincides with negative polarity (see picture 8); in order to perform this operation you need to look at the polarity label on the device itself and its installation instructions manual.




Picture 4 - the programmer's socket

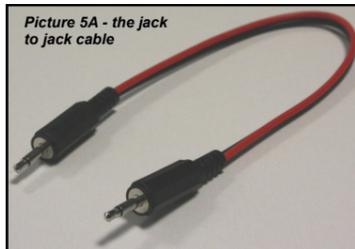

Picture 5A - the jack to jack cable



Picture 6 - an example of cable connection to the 32 tones analogue base sounder

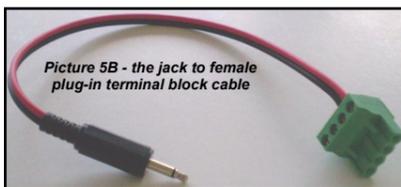

Picture 5B - the jack to female plug-in terminal block cable



Picture 7 - an example of cable connection between the programmer and a conventional zone module



Picture 8 - the cable's plug-in female terminal block in detail

PROGRAMMING UNIT'S KEYS - THE READ KEY

The **READ** key has two purposes:

- Enter into the main menu
- Enter into the address menu.
- "Refresh" the address menu
- Cancel a programming action that has not been yet executed.

PROGRAMMING UNIT'S KEYS - THE WRITE KEY

The **WRITE** key has two purposes:


- Enter into a sub-menu.
- Confirm and program a selected parameter into the connected device.

PROGRAMMING UNIT'S KEYS - THE 'UP' AND 'DOWN' KEYS

The **UP** and **DOWN** keys have the following functions:

- Increase (**UP**) or decrease (**DOWN**) the address that can be assigned to an analogue device.
- Increase (**UP**) or decrease (**DOWN**) the "operating mode" setup number to be assigned to a device. The "operating mode" feature, that is applied only to certain analogue-intelligent devices, will be explained later.
- Navigate through the device's menu or sub-menu.

Picture 9 - the key-display interface in detail

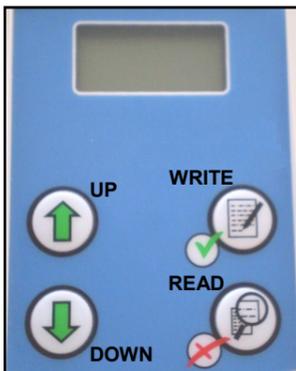

ACTIVATING THE PROGRAMMING UNIT

After having connected the programming unit to a device, press **READ** once; on the display will appear the indication of the programming unit's firmware version. Programming unit's firmware version can be assessed only in this activation phase.

After this initial phase, the display will visualize automatically the address menu.

ADDRESS MENU

This menu is used to read and set the address of the connected analogue-intelligent device and it will work only on this type of devices. This menu is accessible automatically at start up or from the main menu by pressing the **READ** key.

The **Address** caption will be visualized on the display, and under it a three digit number (indicating the actual address of the device) or a **No Addr** (no address, if the device hasn't got, actually, an address).

When in this menu, by just clicking **READ** once, it is possible to read again the address of the connected device, performing a menu "refresh" function.

By using the **UP** and **DOWN** keys, it is possible to increment or decrement the indicated number, and, after it is chosen, press the **WRITE** key to memorize it on the connected analogue device (address storing will fail if an enhanced conventional detector is connected!).

STORING WARNING

WHEN STORING A PARAMETER, DO NOT DISCONNECT THE DEVICE: THIS CAN DAMAGE IT IRREPARABLY.

THE MAIN MENU

From the address menu press the **READ** key for some seconds: **Family** caption will appear giving the user the following options, scrollable with the **UP** and **DOWN** keys:

Aurora: this option must be selected if an enhanced conventional detector is connected to the programmer; if selected, an enter test is made: if successful the main menu is visualized and if not, an error is visualized.

Vega: this option must be selected if an analogue-intelligent device is connected to the programmer; no enter test is performed, but the main menu will not work for a conventional sensor.

The main menu permits to view the data of the connected device and to perform certain setting operations on it.

Visualized data and available commands are not the same for all the devices, but the most of them are common.

A description of the possible menu options and visualized data will be given:

DevType: "device type": under this caption, the programming unit will visualize the short name of the connected device type. Device type datum is visualized for every device.

Addr: "address": this caption, followed by an analogue address number, indicates, under it, the device type associated to such address; is used only for multiple channel module devices and multi-modules, where, for each channel, its address and "sub-device" type needs to be visualized on the programming unit.

Stdval: "standard value": depending on the device type connected, it indicates:

- If an analogue-intelligent device is connected, it indicates its "analogue standard value": this is a common internal index for the analogue series devices; this value ranges from 0 to 255, but in normal condition is stable around 32; when the device is alarmed or activated, this value is set to 192. Standard value datum is visualized for every analogue-intelligent device.

- If an enhanced conventional detector is connected, it indicates the "photo value": this is a non standardized internal index and it is visualized only for conventional detectors having a smoke sensing feature.

ThrTyp: "thermal type": indicates whether the thermal sensor, installed on the programming unit, is a standard ROR (Rate Of Rise) or an high temperature one. By pressing the **WRITE** key, it is possible to access the sub-menu that permits to program the thermal operating mode (ROR or high temperature). Thermal type datum is visualized for enhanced conventional and analogue-intelligent detectors having a thermal sensing feature.

Dirty: indicates the pollution percentage present in the optical chamber of analogue-intelligent and enhanced conventional smoke and smoke-thermal detectors.

FrmVer: "firmware version": indicates the version release number of the firmware loaded into the connected enhanced conventional or analogue-intelligent device. This datum is common to all enhanced conventional and analogue-intelligent devices.

PrdDate: "production date": indicates the date (year and week) of firmware's programming into the connected device. Production date firmware datum is common for every enhanced conventional and analogue-intelligent device.

TstDate: "test date": indicates the date (year and week) of the connected device's functional test in the producer's factory. Test date datum is common for every enhanced conventional and analogue-intelligent device.

Op Mode: "operating mode": indicates a decimal value that, if programmed into certain analogue-intelligent devices, sets its functional operating characteristics. Operating mode datum is visualized and used only for analogue multi-modules, conventional zone modules and analogue 32 tone base sounders and their audio-visual variants.

Set Mod / Set Op: "set (operating) mode": when this caption appears, the pressing of the **WRITE** key permits to access the operating mode value selection sub-menu (with the **Set Op** caption on the display). Operating mode datum is visualized and used only for analogue multi-modules, conventional zone modules and analogue 32 tone base sounders and their audio-visual variants.

Customer: indicates the customer code security value programmed into the connected analogue-intelligent device. Customer code value datum is visualized for all analogue-intelligent devices.

Battery: indicates the remaining battery's power supply percentage of the programming unit.

Battery datum is always visualized, even if the programmer is not connected to any analogue-intelligent device.

	DevType	Addr	Stdval	ThrTyp	Dirty	FrmVer	PrdDate	TstDate	Op Mode	Set Mod / Set Op	Customer	Battery
All analogue smoke detectors	x		x		x	x	x	x			x	x
All analogue smoke and thermal detectors	x		x		x	x	x	x			x	x
All analogue thermal detectors	x		x	x		x	x	x			x	x
Enhanced conventional smoke detector	x		x		x	x	x	x				x
Enhanced conventional smoke and thermal detector	x		x	x	x	x	x	x				x
Enhanced conventional thermal detector	x		x	x		x	x	x				x
All analogue resettable call points	x		x			x	x	x			x	x
All analogue wall sounders	x		x			x	x	x			x	x
Base loop sounder (non 32 tones)	x		x			x	x	x			x	x
32 tones base loop sounder and audio-visual variant	x		x			x	x	x	x	x	x	x
All analogue input modules and channels	x		x			x	x	x	x not used	x not used	x	x
All analogue supervised output modules and channels	x		x			x	x	x			x	x
All analogue relay output modules and channels	x		x			x	x	x			x	x
All multiple channel module devices	x	x	x			x	x	x	x not used	x not used	x	x
All multi-modules	x	x	x			x	x	x	x	x	x	x
Conventional zone module	x		x			x	x	x	x	x	x	x
Analogue loop beacon	x		x			x	x	x			x	x
Analogue remote indicator lamp	x		x			x	x	x			x	x

IDENTIFYING THE DEVICE

Under the **DevType** and **Addr** captions on the programming unit's display, the connected analogue devices are visualized as per the following table:

Device's type indication	Refers to...
Photo	Analogue and enhanced conventional smoke detector
PhTherm	Analogue and enhanced conventional smoke and thermal detector
Thermal	Analogue and enhanced conventional thermal detector
I Module	Analogue input module or channel
O Module	Analogue relay output module or channel
OModSup	Analogue supervised output module or channel
Multiple	Analogue multiple input / output channels device or analogue multi-module
CallPnt	Analogue call point
Sounder	Analogue sounder (wall or base)
Beacon	Analogue beacon
Sound B	Analogue sounder beacon
Conv Zon	Conventional zone module
Remote I	Analogue remote indicator lamp
Special	An analogue device that is not in this list

SETTING THE THERMAL OPERATING MODE

Having a detector with a thermal sensing feature connected to the programming unit, while visualizing **ThrTyp** on the main menu, press the **WRITE** key; **SelTyp** (select type) caption will be displayed, and under it will be indicated either **Std** (standard ROR mode) or **High°C** (high temperature mode) depending on the actual thermal operating mode of the detector; if you want to change the thermal mode just press **UP** or **DOWN** to select the desired one, then press the **WRITE** key.

You can return to the main menu, if you decided not to change nothing, by pressing on the **READ** key.

SETTING THE OPERATING MODE VALUE

While in **Set Mod / Set Op** press the **WRITE** key. The **Set Op** sub-menu and caption will appear on display; beneath it, three digits will indicate the actual programmed operating mode value for the connected device that can be changed by pressing the **UP** or **DOWN** keys; after the value has been chosen, just press **WRITE** to memorize it on the connected device.

You can return to the main menu, if you decided not to change nothing, by pressing on the **READ** key.

MESSAGES

The following table illustrates the most common messages given by the programming unit and their meaning:

Programming unit message	Meaning
Ent Test Error!	This message is given when the enter test, made for the enhanced conventional detector, failed
Ent Test Ok	This message is given when the enter test, made for the enhanced conventional detector, succeeded
Fatal Error!	An irreversible error; if this occurs, the detector is compromised, must not be used and needs to be substituted
Storing	Indicates that the device is being programmed with the selected parameter
Stored	Indicates that the device has been successfully programmed with the selected parameter
Reading	Indicates that the device is being queried for a parameter value
Read	Indicates that the device has been successfully queried for a parameter value
Failed	The performed reading or storing operation just failed
Miss Dev	No device is connected to the programming unit
BlankDev	The connected device has no firmware programmed
No Addr	The connected device has no analogue address
Low batt	Programming unit battery needs to be changed
Unspec	Customer security code is not specified

POWER OFF

The programming unit switches off by itself after 30 seconds of inactivity.

TECHNICAL SPECIFICATIONS	
Power supply battery specifications	6LR61 type, 9 V
Operating temperature range	from -30°C to +70°C
Maximum tolerated relative humidity	95% RH (no condensation)
Weight	200 grams

WARNINGS AND LIMITATIONS

Our devices use high quality electronic components and plastic materials that are highly resistant to environmental deterioration. However, after 10 years of continuous operation, it is advisable to replace the devices in order to minimize the risk of reduced performance caused by external factors. Ensure that this device is only used with compatible control panels. Detection systems must be checked, serviced and maintained on a regular basis to confirm correct operation.

Smoke sensors may respond differently to various kinds of smoke particles, thus application advice should be sought for special risks. Sensors cannot respond correctly if barriers exist between them and the fire location and may be affected by special environmental conditions.

Refer to and follow national codes of practice and other internationally recognized fire engineering standards. Appropriate risk assessment should be carried out initially to determine correct design criteria and updated periodically.

WARRANTY

All devices are supplied with the benefit of a limited 3 year warranty relating to faulty materials or manufacturing defects, effective from the production date indicated on each product.

This warranty is invalidated by mechanical or electrical damage caused in the field by incorrect handling or usage. Product must be returned via your authorized supplier for repair or replacement together with full information on any problem identified.

Full details on our warranty and product return policy can be obtained upon request.